


INSTRUCTIONS FOR USE

Intelli-Cross Pro


SLDXA-2P Series LC Uniboot Connector

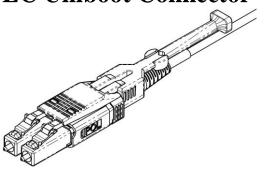


Thank you for choosing *Intelli-Cross Pro SLDXA-2P* series LC uniboot connector. Before use, please read these instructions carefully and use it properly.

1 How to reverse polarity

Intelli-Cross Pro SLDXA-2P series LC uniboot connector is very easy to reverse polarity.

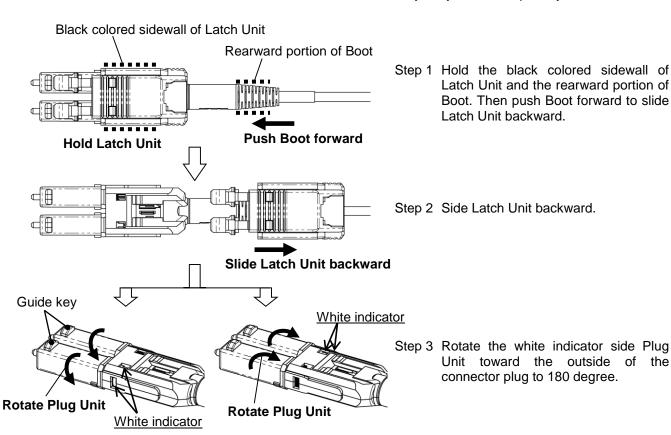

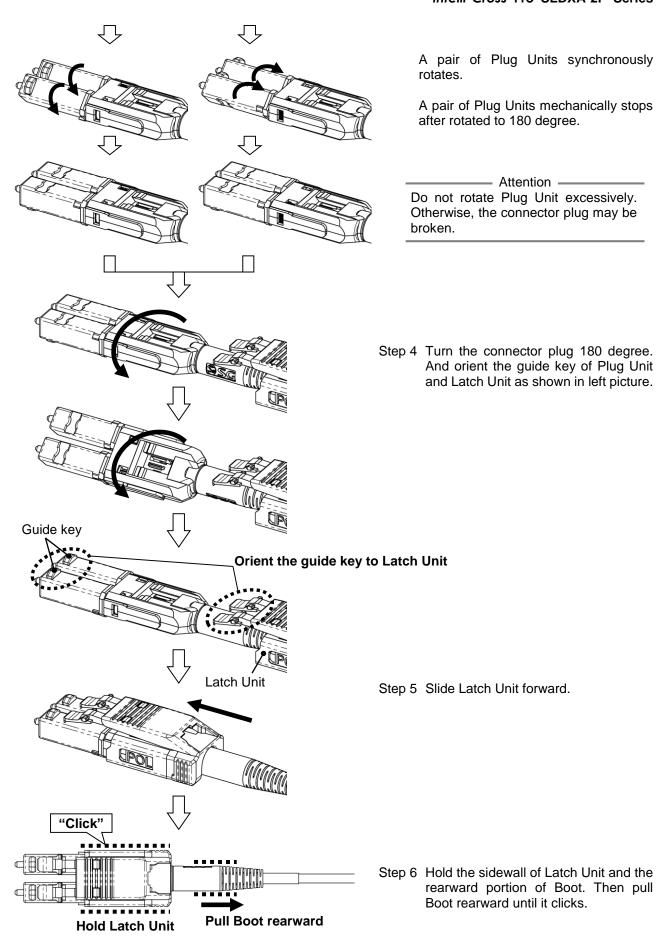


2 How to use Optional Push-Pull Tool

Optional Push-Pull Tool can be installed to this product.

Optional Push-Pull Tool can be broken off in the middle, in case the shorter push-pull tool is required.

(1) How to install Optional Push-Pull Tool

Even while the connector plug is mated to the adaptor, Optional Push-Pull Tool can be installed to the connector plug.

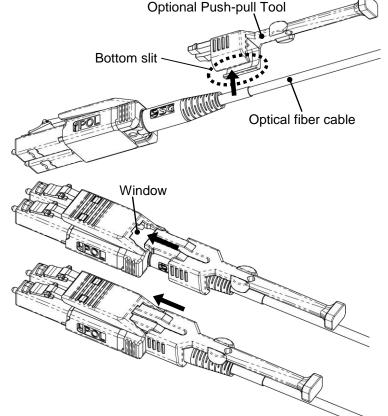


Put the optical fiber cable into the bottom slit of Optional Push-pull Tool.

Insert top of Optional Push-pull Tool into rear window of Latch Unit until it stops.


(2) How to remove Optional Push-Pull Tool

While the connector plug is mated to the adaptor, Optional Push-Pull Tool can not be removed from the connector plug.

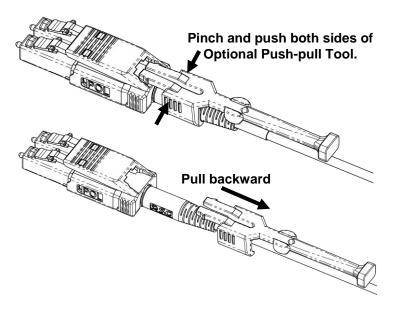

Pinch and push both front sides of Optional Push-pull Tool to warp inside. Keep warping inside and pull Optional Push-pull Tool backward to remove from connector.

(3) How to make Optional Push-Pull Tight Tool shorter

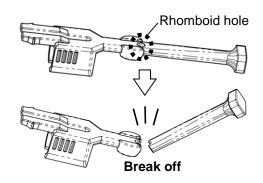

Break Optional Push-pull Tool at the middle rhomboid hole.

The broken off rear portion of Optional Push-pull Tool can be discarded with following the regulations of your own country.


Material: PBT, glass fiber reinforced,

Flame-retardant material contained

3 How to mate/remove the connector plug

This is the push-pull type connector plug.

(1) How to mate the connector plug to the adaptor

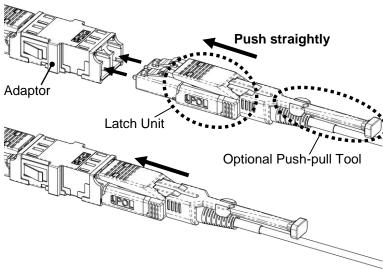

Hold Latch Unit or Optional Push-pull Tool, and push it straightly to the adaptor until clicking.

Approximately 12 N (1.2 kgf) pushing force is required.

(2) How to remove the connector plug from the adaptor The connector plug can be removed by either of three ways.

a) Push the top and pull backward

c) Pull Optional Push-pull Tool backward

- Push the top of Latch Unit and pull the connector plug backward
- Hold the sidewall of the colored Latch Unit and pull the connector plug backward.
- Pull Optional Push-pull Tool backward.

4 Endface cleaner

For this product, the following endface cleaners are recommended.

- SEIKOH GIKEN SHM-502 (Handi Mate™)

b) Hold the sidewall of the colored

Latch Unit and pull backward

- SEIKOH GIKEN SHM-503 (Handi Mate™)
- SEIKOH GIKEN SFM2.0-125 (Ferrule Mate™)

Copyright © 2020 by SEIKOH GIKEN Co.,Ltd.